

L80-R EVB User Guide

GPS Module Series

Rev. L80-R_EVB_User_Guide_V1.0

Date: 2015-09-11



Our aim is to provide customers with timely and comprehensive service. For any assistance, please contact our company headquarters

Quectel Wireless Solutions Co., Ltd.

Office Building 13, No.99, Tianzhou Road, Shanghai, China, 200233

Tel: +86 21 5108 6236

Mail: info@quectel.com

Or our local office, for more information, please visit:

<http://www.quectel.com/support/salesupport.aspx>

For technical support, to report documentation errors, please visit:

<http://www.quectel.com/support/techsupport.aspx>

Or Email: Support@quectel.com

GENERAL NOTES

QUECTEL OFFERS THIS INFORMATION AS A SERVICE TO ITS CUSTOMERS. THE INFORMATION PROVIDED IS BASED UPON CUSTOMERS' REQUIREMENTS. QUECTEL MAKES EVERY EFFORT TO ENSURE THE QUALITY OF THE INFORMATION IT MAKES AVAILABLE. QUECTEL DOES NOT MAKE ANY WARRANTY AS TO THE INFORMATION CONTAINED HEREIN, AND DOES NOT ACCEPT ANY LIABILITY FOR ANY INJURY, LOSS OR DAMAGE OF ANY KIND INCURRED BY USE OF OR RELIANCE UPON THE INFORMATION. ALL INFORMATION SUPPLIED HEREIN IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

COPYRIGHT

THIS INFORMATION CONTAINED HERE IS PROPRIETARY TECHNICAL INFORMATION OF QUECTEL CO., LTD. TRANSMITTABLE, REPRODUCTION, DISSEMINATION AND EDITING OF THIS DOCUMENT AS WELL AS UTILIZATION OF THIS CONTENTS ARE FORBIDDEN WITHOUT PERMISSION. OFFENDERS WILL BE HELD LIABLE FOR PAYMENT OF DAMAGES. ALL RIGHTS ARE RESERVED IN THE EVENT OF A PATENT GRANT OR REGISTRATION OF A UTILITY MODEL OR DESIGN.

Copyright © Quectel Wireless Solutions Co., Ltd. 2015. All rights reserved.

About the Document

History

Revision	Date	Author	Description
1.0	2015-09-11	Connie ZHOU	Initial

Quectel
Confidential

Contents

About the Document.....	2
Contents.....	3
Table Index.....	4
Figure Index.....	5
1 Introduction	6
2 Introduction to EVB Kit	7
2.1. EVB Top and Bottom View.....	7
2.2. EVB Accessories.....	9
3 Interface Application	10
3.1. USB Interface.....	10
3.2. UART Interface.....	11
3.3. Switches and Buttons	12
3.4. Test Point.....	13
4 EVB and Accessories.....	14
5 Install Device Driver.....	15
6 Starting PowerGPS.....	16
7 Appendix A Reference.....	19

Table Index

TABLE 1: EVB BOTTOM VIEW	8
TABLE 2: EVB ACCESSORIES	9
TABLE 3: PINS OF UART PORT	11
TABLE 4: SWITCHES AND BUTTONS.....	12
TABLE 5: THE DESCRIPTION OF TEST POINTS	13
TABLE 6: EXPLANATIONS OF POWERGPS WINDOW	17
TABLE 7: REFERENCE	19
TABLE 8: ABBREVIATIONS	19

Quectel
Confidential

Figure Index

FIGURE 1: EVB TOP VIEW	7
FIGURE 2: EVB BOTTOM VIEW	8
FIGURE 3: EVB ACCESSORIES	9
FIGURE 4: MICRO-USB INTERFACE	10
FIGURE 5: UART INTERFACE	11
FIGURE 6: SWITCHES AND BUTTONS	12
FIGURE 7: TEST POINTS.....	13
FIGURE 8: EVB AND ACCESSORY EQUIPMENTS	14
FIGURE 9: POWERGPS TOOL	16
FIGURE 10: COM PORT AND BAUD	16
FIGURE 11: MTK COMMAND.....	18

Quectel
Confidential

1 Introduction

This document defines and specifies the usage of L80-R EVB (Evaluation Board). You can get useful information about L80-R EVB and GPS demo tool from this document.

Quectel
Confidential

2 Introduction to EVB Kit

2.1. EVB Top and Bottom View

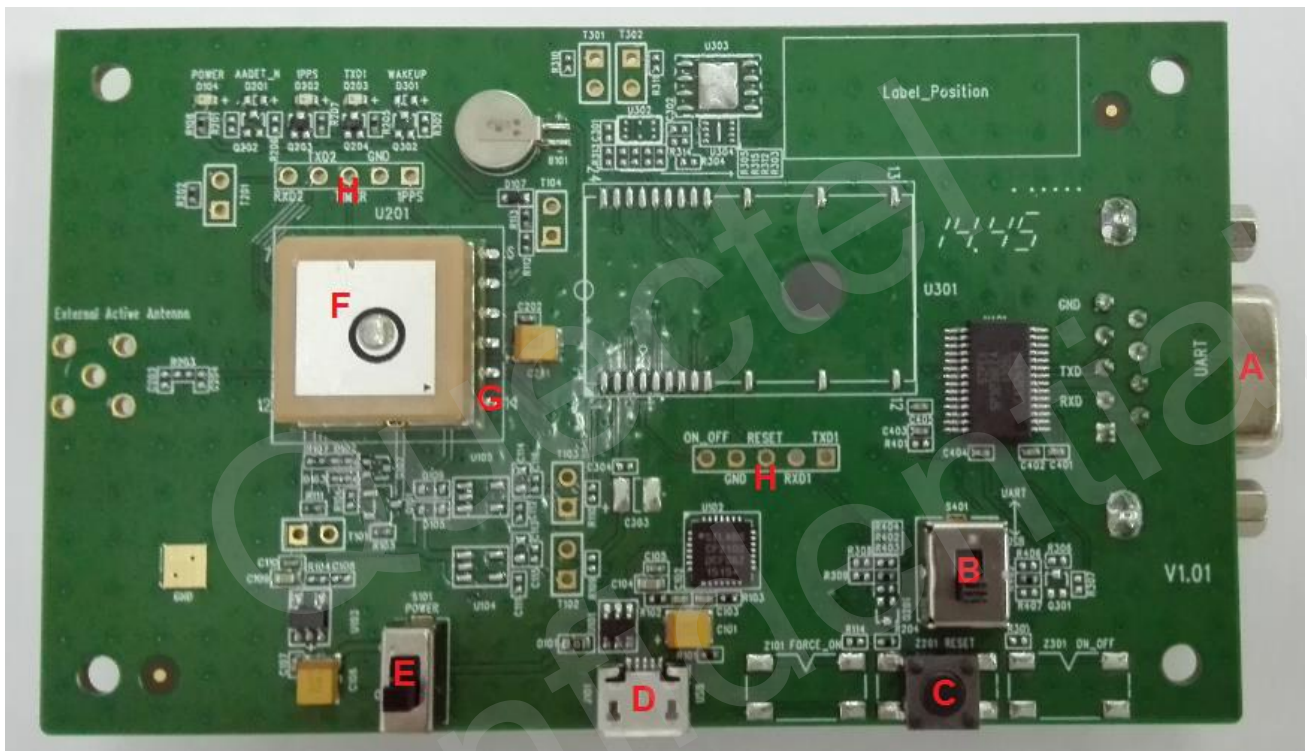


Figure 1: EVB Top View



Figure 2: EVB Bottom View

Table 1: EVB Bottom View

Index	Description
A	UART port
B	Serial port alternation switch
C	RESET button
D	Micro-USB port
E	POWER switch
F	PATCH antenna
G	L80-R module
H	Test points

2.2. EVB Accessories



Figure 3: EVB Accessories

Table 2: EVB Accessories

Index	Description
A	USB cable

3 Interface Application

3.1. USB Interface

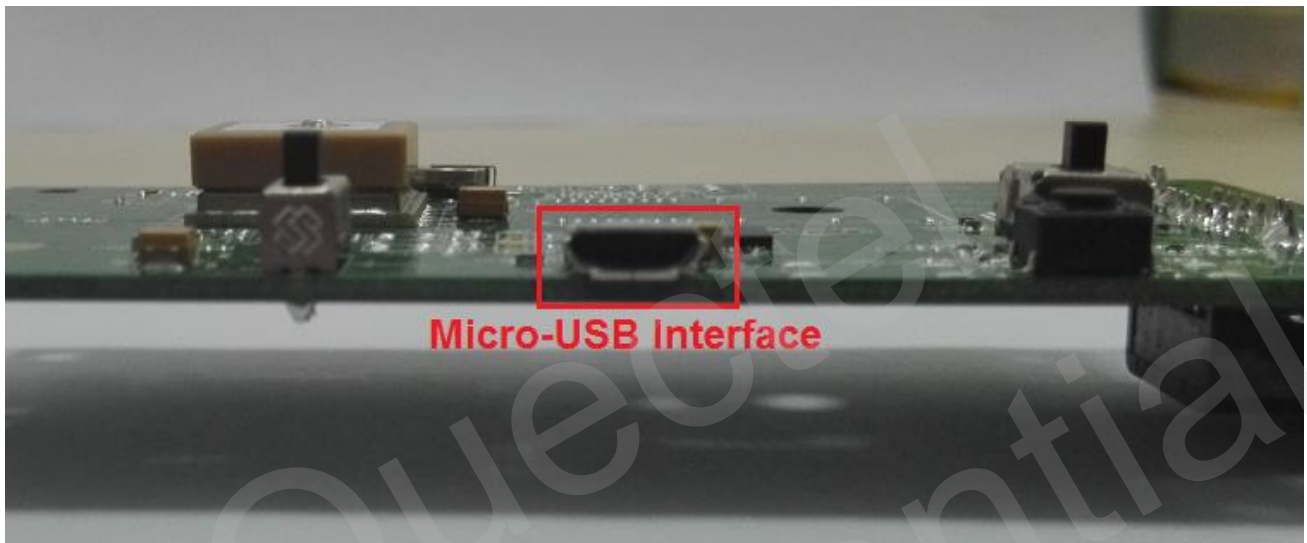


Figure 4: Micro-USB Interface

The main power is supplied via Micro-USB interface. Quectel provides two ways for data communication: Micro-USB and UART interface which are controlled by serial port alternation switch (S401). Both RS232 and Micro-USB cable are necessary, if you want to use UART to output NEMA. So the easy way is that use Micro-USB cable which provides both the power and output NEMA. You can make alternation between UART port and Micro-USB interface via switch (S401).

3.2. UART Interface

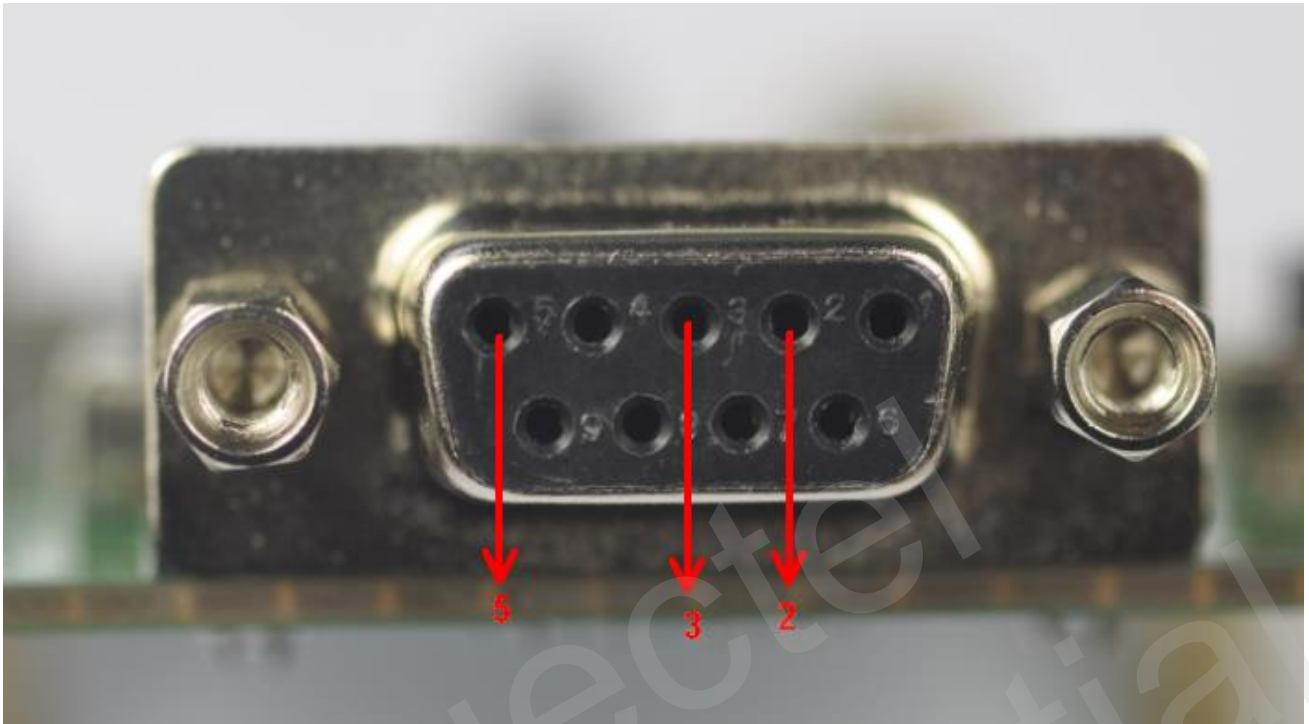


Figure 5: UART Interface

Table 3: Pins of UART Port

Pin	Signal	I/O	Description
2	RXD	I	Receive data
3	TXD	O	Transmit data
5	GND		GND

3.3. Switches and Buttons

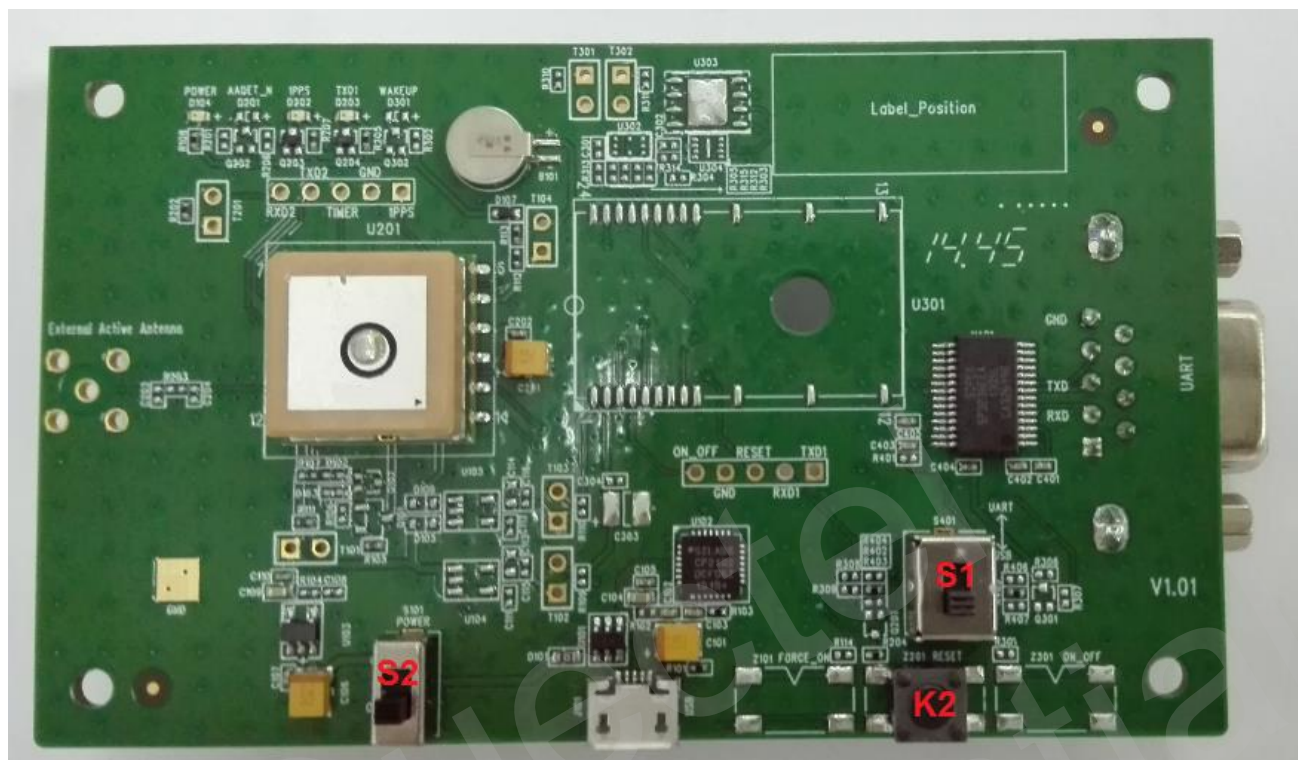


Figure 6: Switches and Buttons

Table 4: Switches and Buttons

Part	Name	I/O	Description
S1	Serial port alternation switch	I	Quectel EVB supplies two communicative ways: Micro-USB and UART which are controlled by switch.
S2	POWER	I	Control power supply via Micro-USB.
K2	RESET	I	Press and release this button, then the module will reset.

3.4. Test Point

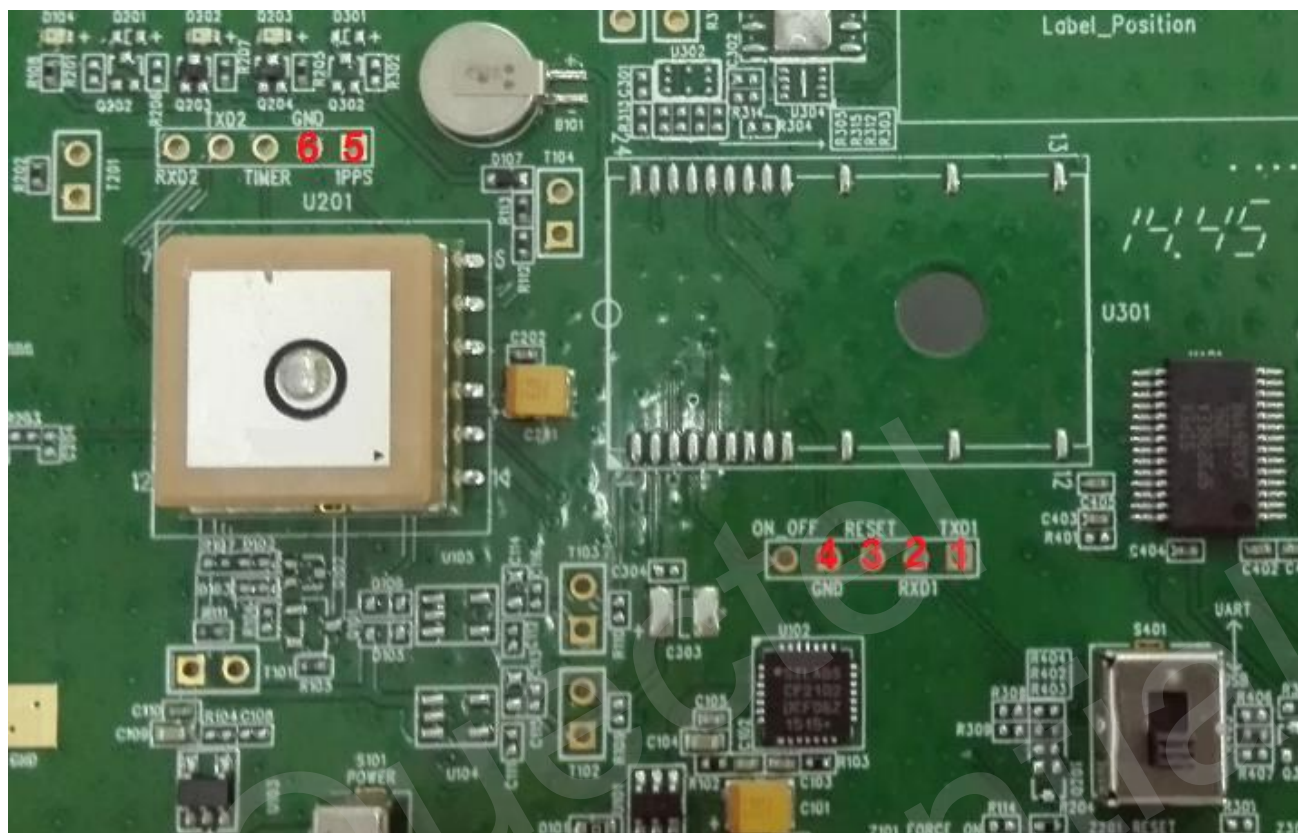


Figure 7: Test Points

Table 5: The Description of Test Points

Pin	Signal	I/O	Description
1	TXD1	O	Transmit data
2	RXD1	I	Receive data
3	RESET	I	System reset
4/6	GND		Ground
5	1PPS	O	1 pulse per second

4 EVB and Accessories

The EVB and its accessories are equipped as shown in Figure 8.



Figure 8: EVB and Accessory Equipments

5 Install Device Driver

Please note that you need to install the driver of Micro-USB, when using Micro-USB for data communication. The driver has been stored in our FTP server. The driver of CP210x also can be downloaded from internet. The download path of our FTP server is shown as below:

Overseas customer: /d:/FTP/OC/Overseas_Technical/Overseas_Module Official Documents/GNSS Module/Common/04 Tool Kit/GNSS_EVB_Micro-USB_Driver_CP210x.

Domestic customer: /d:/FTP/CC/Domestic_Technical/Domestic_Module Official Documents/GNSS Module/Common/04 Tool Kit/GNSS_EVB_Micro-USB_Driver_CP210x.

Quectel
Confidential

6 Starting PowerGPS

The PowerGPS version is V2.3.2. The PowerGPS tool can help user to view the status of GPS receiver conveniently. When the tool is opened, the following window will be displayed:

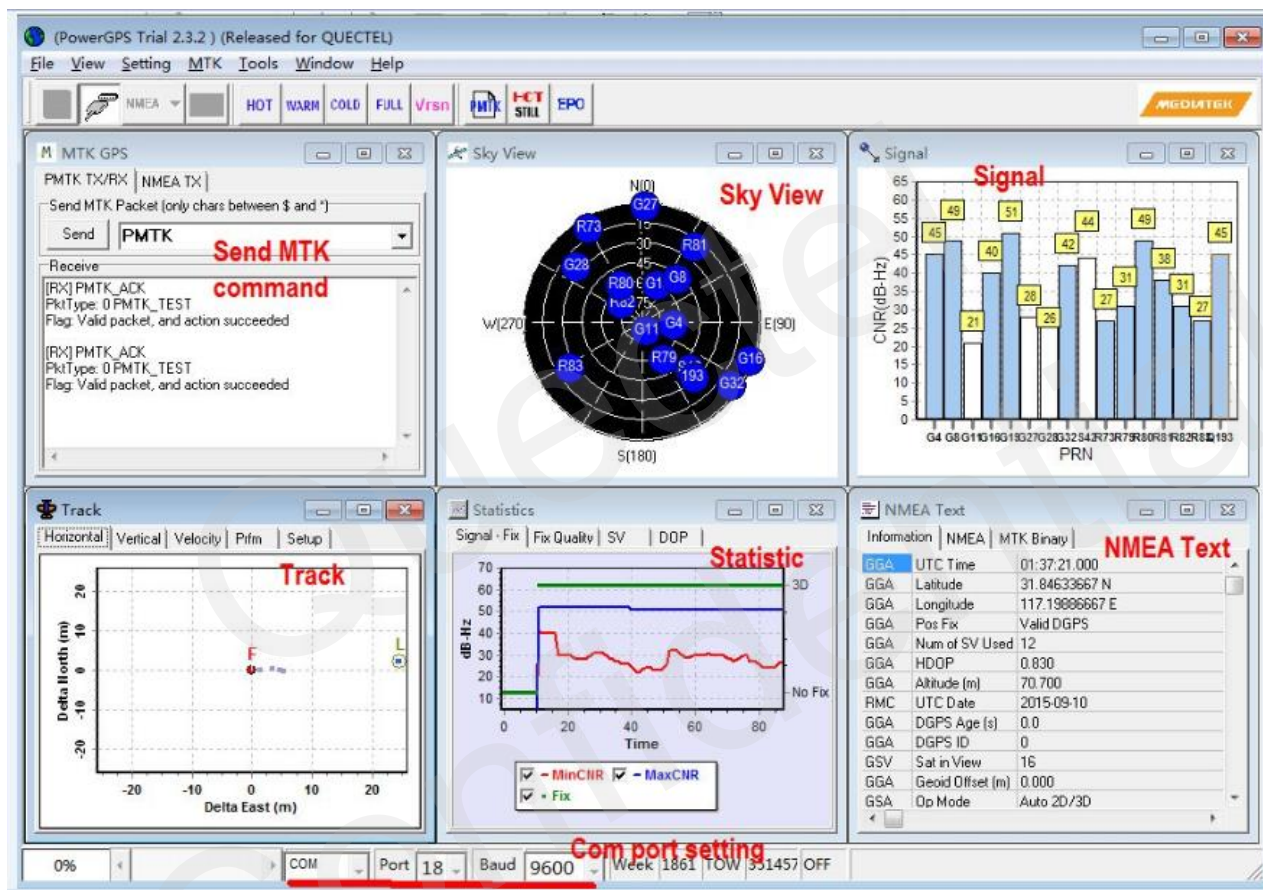


Figure 9: PowerGPS Tool


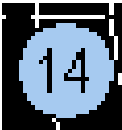
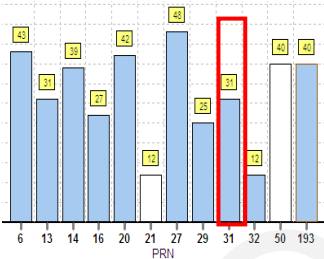
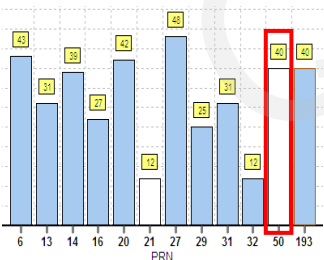
After EVB accessories are assembled, turn on the module and start up the PowerGPS. Select a correct COM port and baud rate (L80-R module supports 9600bps by default), then click the button “Create Connection”.



Figure 10: COM Port and Baud

From the PowerGPS window, user can view CNR message, time, position, speed, precision and so on. Explanations are listed in Table 6.

Table 6: Explanations of PowerGPS Window

Icon	Explanation																
	SV with PRN 20. If the position of SV is near to the centre of the Sky View, the elevation angle of SV is close to 90°. Dark blue means this satellite is in tracking.																
	Light blue means this satellite is not in tracking.																
	The CNR of PRN 27 is 48dB/Hz. Light blue column means the navigation data of this satellite is in use.																
	The CNR of PRN 50 is 40dB/Hz. White column means the navigation data of this satellite is not in use.																
<table border="1" data-bbox="150 1456 469 1713"> <tr><td>UTC Time</td><td>08:54:07.000</td></tr> <tr><td>Latitude</td><td>31.84580167 N</td></tr> <tr><td>Longitude</td><td>117.19548500 E</td></tr> <tr><td>Pos Fix</td><td>Valid DGPS</td></tr> <tr><td>Sat used</td><td>17</td></tr> <tr><td>HDOP</td><td>0.630</td></tr> <tr><td>Altitude</td><td>16.200 M</td></tr> <tr><td>UTC Date</td><td>2013-01-11</td></tr> </table>	UTC Time	08:54:07.000	Latitude	31.84580167 N	Longitude	117.19548500 E	Pos Fix	Valid DGPS	Sat used	17	HDOP	0.630	Altitude	16.200 M	UTC Date	2013-01-11	UTC time Latitude degree longitude degree Positing fix Using the number of satellites Horizontal Dilution of Precision Altitude based on WGS84 Datum UTC date
UTC Time	08:54:07.000																
Latitude	31.84580167 N																
Longitude	117.19548500 E																
Pos Fix	Valid DGPS																
Sat used	17																
HDOP	0.630																
Altitude	16.200 M																
UTC Date	2013-01-11																
<table border="1" data-bbox="150 1780 469 1937"> <tr><td>Fixing Mode</td><td>3D</td></tr> <tr><td>Sat Used</td><td>18 25 14 21 15 31</td></tr> <tr><td>PDOP</td><td>1.680</td></tr> <tr><td>VDOP</td><td>1.410</td></tr> <tr><td>Speed (m/s)</td><td>0.005</td></tr> </table>	Fixing Mode	3D	Sat Used	18 25 14 21 15 31	PDOP	1.680	VDOP	1.410	Speed (m/s)	0.005	Fix type: No-Fix, 3D or 2D SPS Using satellite Position Dilution of Precision Vertical Dilution of Precision Speed of receiver						
Fixing Mode	3D																
Sat Used	18 25 14 21 15 31																
PDOP	1.680																
VDOP	1.410																
Speed (m/s)	0.005																

You can send PMTK command by PowerGPS. The format of PMTK command only includes characters between '\$' and '*', for example: PMTK869,0.

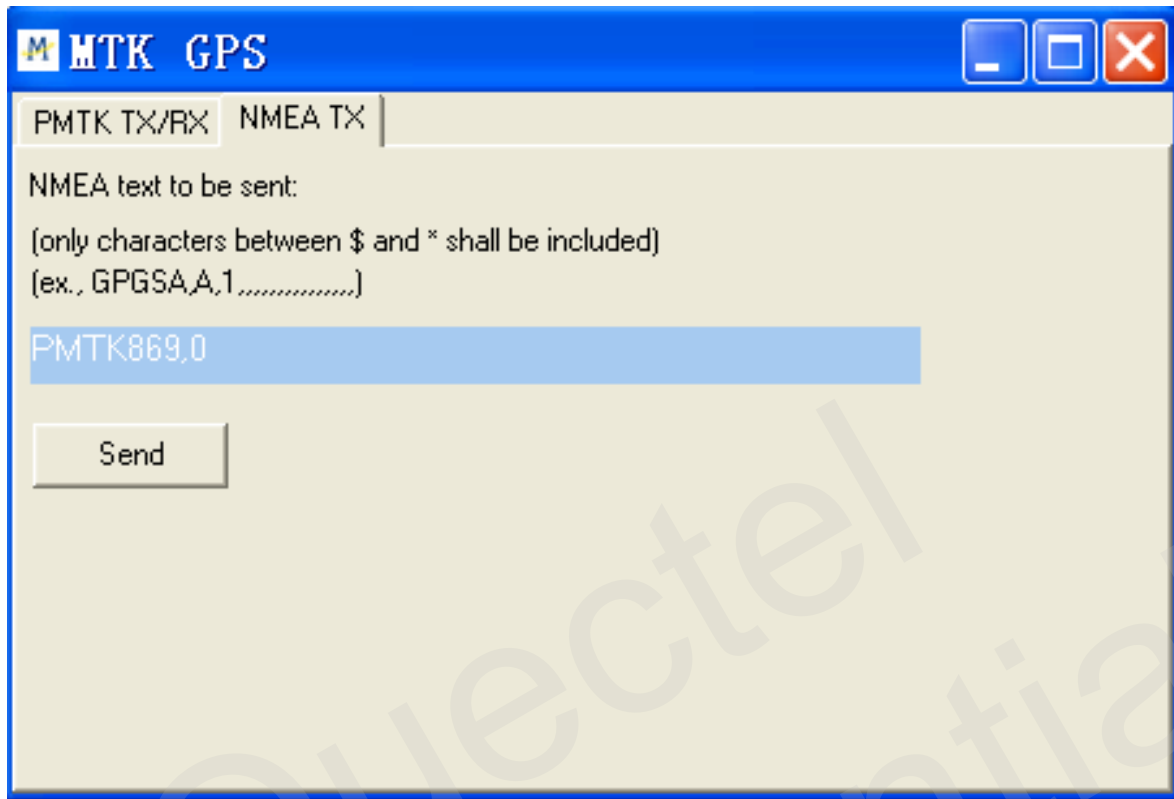


Figure 11: MTK Command

7 Appendix A Reference

Table 7: Reference

SN	Document Name	Remark
[1]	Quectel_L80-R_Hardware_Design	L80-R Hardware Design
[2]	Quectel_L80-R_Protocol_Specification	L80-R Protocol Specification
[3]	Quectel_L80-R_Reference Design	L80-R Reference Design

Table 8: Abbreviations

Abbreviation	Description
CNR	Carrier-to-Noise Ratio
GPS	Global Positioning System
PPS	Pulse Per Second
PRN	Pseudorandom Noise
SPS	Standard Positioning Service
SV	Satellite Vehicle
UART	Universal Asynchronous Receiver & Transmitter
UTC	Universal Time Coordinated
WGS84	World Geodetic System 1984